

Manager instructions EM3054 Hotel mode

Hotel mode

♪♪ = Double signal, ♪ = Long signal, ☼ = Light (LED) flashes, * = Light (LED) stays on,
① = Number on entry, ☞ = Press and hold till ♪♪ *

General

The lock operates with a numeric six-digit manager code (factory mode:1 2 3 4 5 6) or a 4 digit user code. The lock has 2 different modes:

1. The open mode. Entering 4 digits will program the next opening code.
2. The secured mode. The lock has been closed with a 4-digit code and requires this code to open.

Each key press is confirmed with an audible and light signal. After entry of a valid code a double signal follows. An invalid entry is followed by a long signal. After 10 seconds without entry, an already started code entry is cancelled.

Open with managercode

Press and hold key “1” until double signal.
The light remains on during the following actions.
Enter manager code ♪♪
The lock will open.

For example:

☞ ① ♪♪ *

① ② ③ ④ ⑤ ⑥ ♪♪ *

Change manager code (with door open)

Press and hold key “0” until double signal.
The light remains on during the following actions.

- Enter old code ♪♪
- Enter new code ♪♪
and repeat new code ♪♪

For example:

☞ ① ♪♪ *

① ② ③ ④ ⑤ ⑥ ♪♪ *

⑨ ⑧ ⑦ ⑥ ⑤ ④ ♪♪ *

⑨ ⑧ ⑦ ⑥ ⑤ ④ ♪♪

In case of entry errors (long signal ♪), the old code remains valid.

Keypad check

Press and hold key “5” until double signal and light stays on.
The light remains on during the following actions.
Enter successively 1,2,3,4,5,6,7,8,9,0
If key = OK ♪♪ (double signal)
If key = not OK ♪ (long signal)

For example:

☞ ⑤ ♪♪ *

① ② ③ ④ ⑤ ⑥ ⑦ ⑧ ⑨ ⑩