

User manual

Change to new key:

The door can be opened with the installed operating key (or with the setup key).

With door open, close the boltwork and the lock.

Turn the operating key / setup key slowly to the right until the change mark on the operating key / setup key is lined-up with the change index on the escutcheon.


(You will hear a "click" in the lock).



Insert the change key into the change key hole at the back of the lock (inside the door). Turn the key about 90° to the RIGHT until it stops. Turn the operating key / setup key to the left and take it out.

Using a new operating key, turn slowly to the right until the change mark on the operating key is lined-up with the change index on the escutcheon.

Turn the change key LEFT and remove.

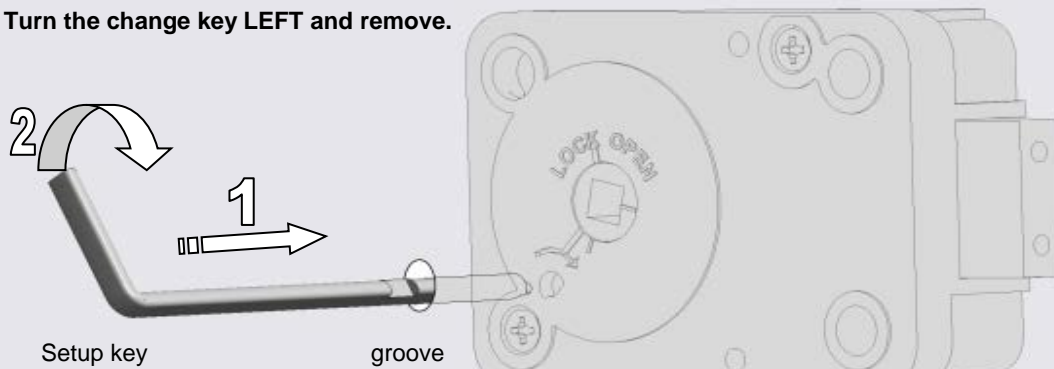

Never use any force!

If the key does not turn at all it has not entered the lock all the way. Try to put it all the way in. If impossible, start the entire change process right from the beginning.

Open several times with new key before locking the door.

Setup key

If a technician programs several locks with one setup key, he has to test the key meanwhile. In case the key is slightly bent or worn off, the code will not be set exactly.