

M•LOCKS

Alpha 1

AL2010

AL2020


AL2030

Mounting
instructions
V01 EN



M•LOCKS BV

Vlijtstraat 40 • 7005 BN Doetinchem • the Netherlands • www.m-locks.com

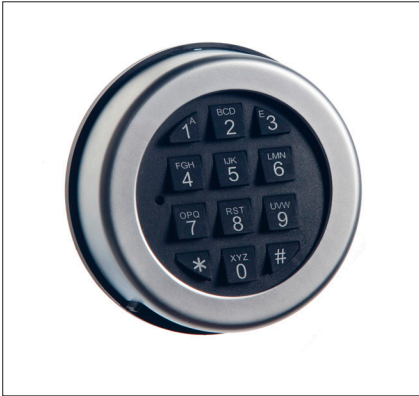

AL2010 / AL2020



AL2030

1 IMPORTANT INSTRUCTIONS

- **Before mounting the entry unit, please read the instructions carefully.**
- **Exclusively use supplied screws for mounting the entry unit.**
- **This mounting instruction is part of VdS certification and has to be followed up precisely.**
- At the time of delivery, the lock is set to the standard Manager Code of 1 2 3 4 5 6. Change this code immediately to your own choice of Manager Code. Do not use personal or other simple data which can easily be found out for your Manager Code.
- Please keep the code always carefully and protect it against improper use by unauthorized persons.

2 CHARACTERISTICS


AL2010 Metal housing chrome, with integrated battery compartment

AL2020 ABS housing chrome, with integrated battery compartment

AL2030 ABS housing black, with integrated battery compartment


Every key of the "soft touch"-keypad is angled so the lettering of the key is readable even if looking from above. The integrated battery compartment in the bottom of the Alpha entry unit opens by moving a slider. Cable length is approximately 30 cm.

3 DIMENSIONS

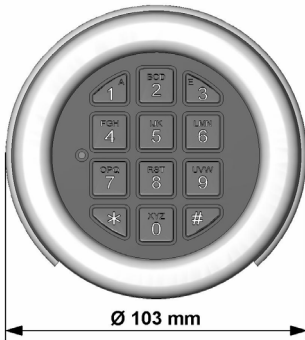

The diameter of the cable hole should be minimum 9 mm, maximum 12 mm. The hole must be de-burred well to avoid damage to the cable.

4 MOUNTING INSTRUCTIONS

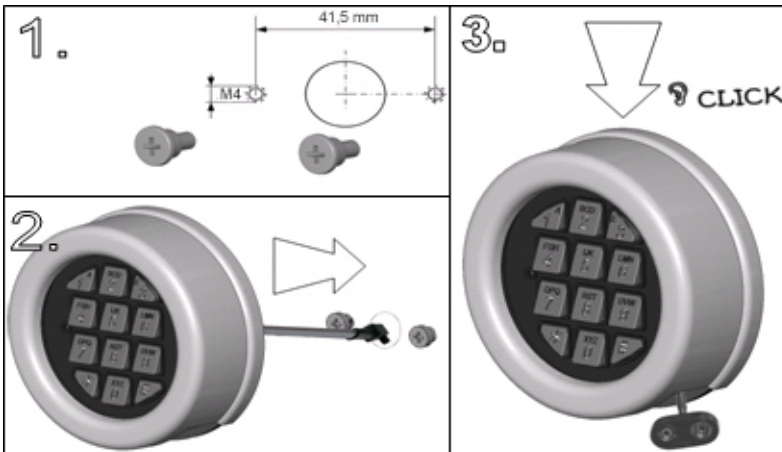


1. Affix the two mounting adapter screws (M4) hand tied.
2. Route the cable through the cable hole and slide the unit on the mounting adapters. The back of the unit must touch the door surface.
3. Control cable routing, then push the unit down until it snaps on positively.

The Alpha 1 entry unit can now not be removed!

Connect one battery to the battery clip. Only use new 9V ALKALINE Duracell / Duracell Industrial- or Energizer batteries.

M•LOCKS

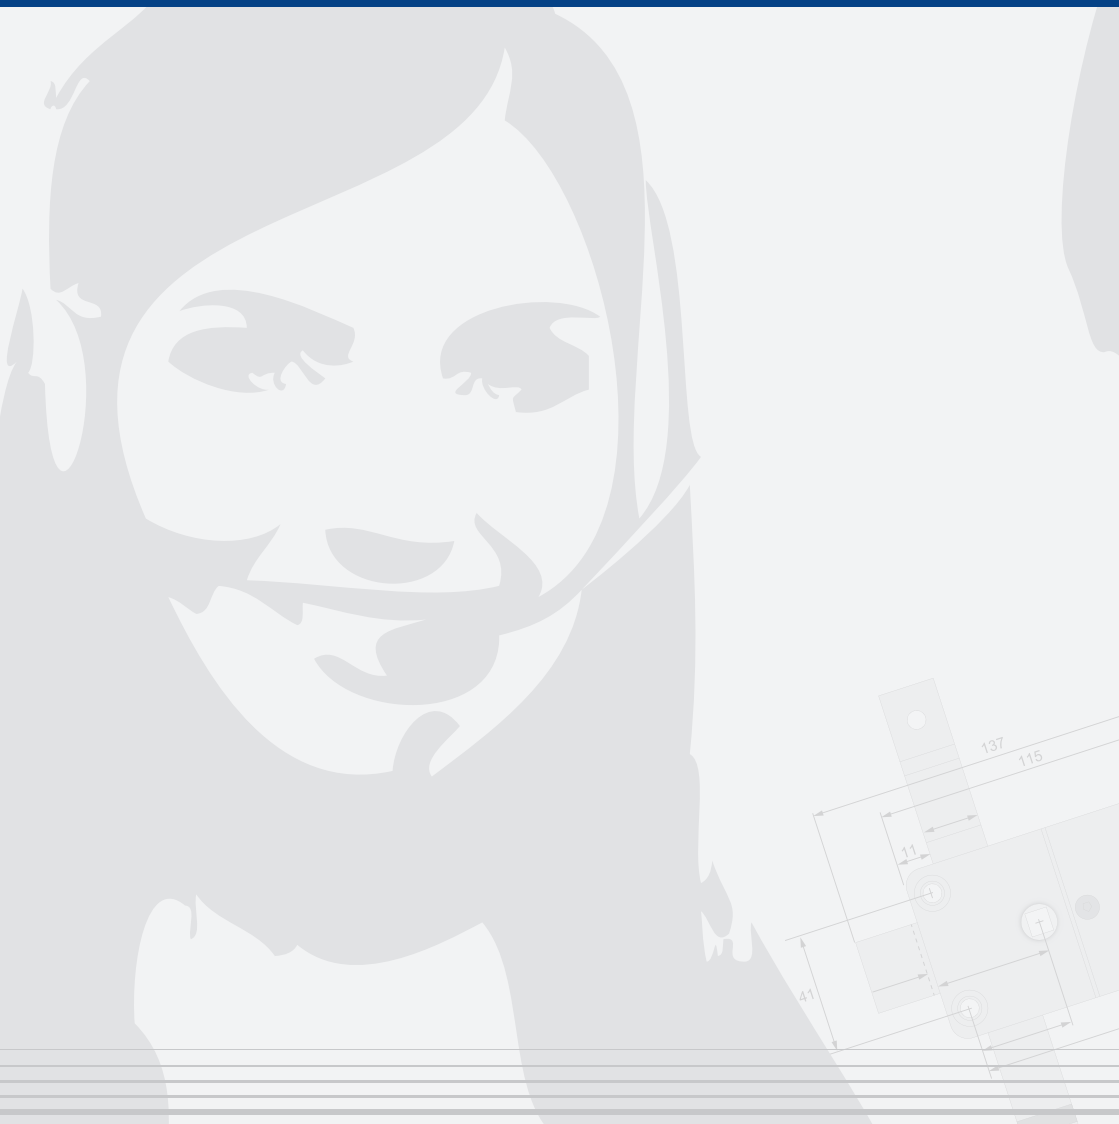

M•LOCKS BV

Vlijtstraat 40 • 7005 BN Doetinchem • The Netherlands • www.m-locks.com